


**LGS 360 G**

	Part No.
LGS 360 G - 3.0 m	K10429-36-3M
LGS 360 G - 4.0 m	K10429-36-4M
LGS 360 G - 5.0 m	K10429-36-5M

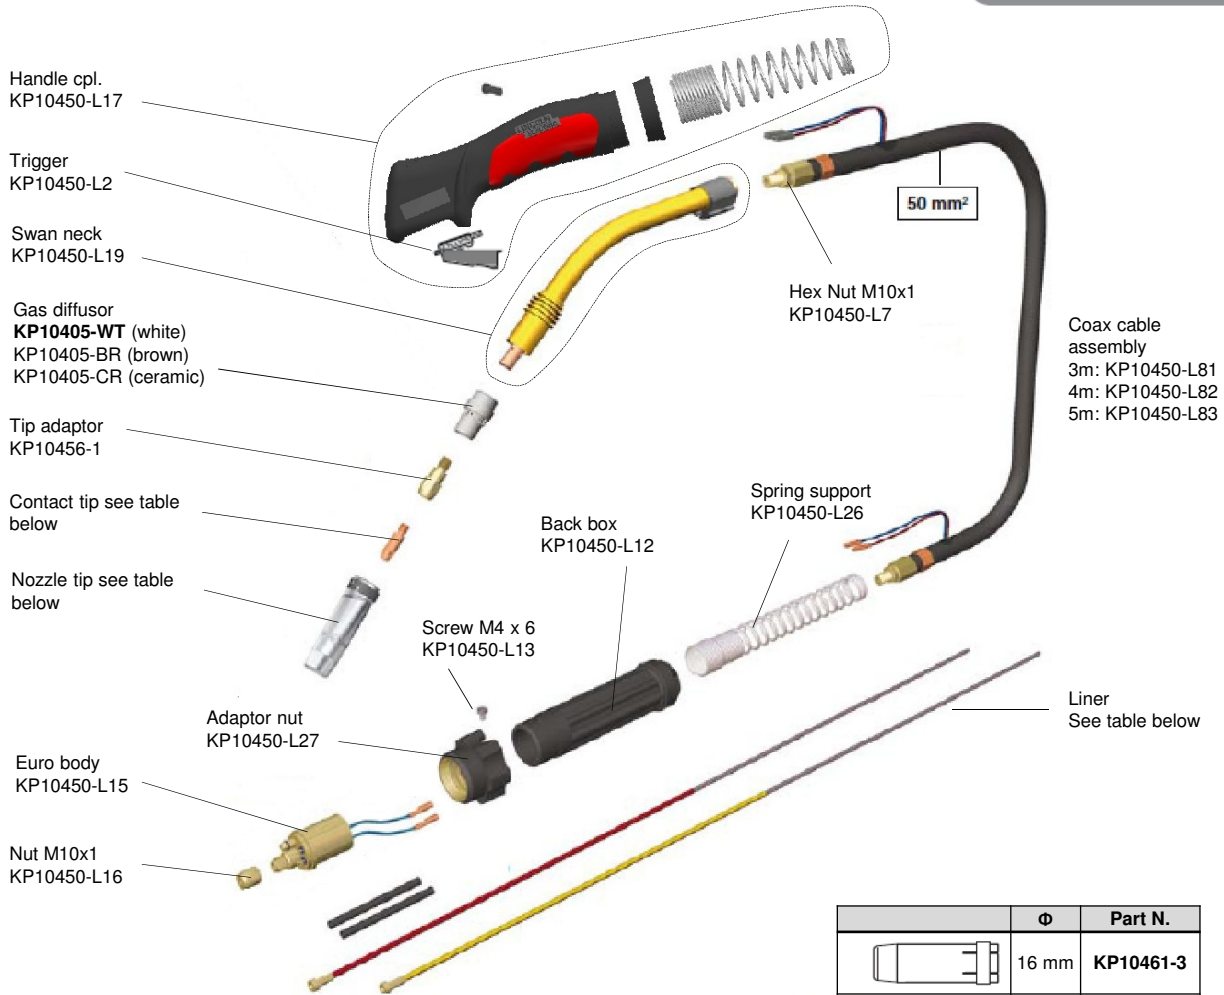

	M8x30				
	0.8 mm	0.9 mm	1.0 mm	1.2 mm	1.6 mm
<b>ECu</b>	KP10445-08	KP10445-09	KP10445-10	<b>KP10445-12</b>	KP10445-16
<b>CuCrZr</b>	KP10445-08C	KP10445-09C	KP10445-10C	KP10445-12C	KP10445-16C
<b>Al (Ecu)</b>	KP10445-08A	KP10445-09A	KP10445-10A	KP10445-12A	KP10445-16A

	Φ	Part N.
	16 mm	<b>KP10461-3</b>
	12 mm	KP10461-8
	20 mm	KP10460-3
	20 mm	KP10463-3

		Ø	x			
			3 m	4 m	5 m	
<b>Steel liner</b>	red	Steel	1.0 - 1.2	<b>KP10414-3M</b>	<b>KP10414-4M</b>	<b>KP10414-5M</b>
	yellow		1.2 - 1.6	KP10415-3M	KP10415-4M	KP10415-5M
<b>PTFE liner</b>	red	Alu, Stainless, CuSi	1.0 - 1.2	KP10418-3M	KP10418-4M	KP10418-5M
	yellow		1.2 - 1.6	KP10420-3M	KP10420-4M	KP10420-5M
<b>Aluminum kit (PTFE /bronze)</b>	red	Alu, Stainless, CuSi	1.0 - 1.2	KP10419-3M	KP10419-4M	KP10419-5M

# Maintenance and User Manual



**Warning: Risk of electric shock!**

**Always disconnect the welding machine from the line power before maintenance, inspection, or exchange of spare parts.**

## Precautions
